

# Warewashing



## **SELECT**

Select is a concentrated heavy duty dishwashing machine detergent. Effective in all water hardness conditions. Highly recommended for heavily soiled ware.



## **QUICK DRY**

Quick dry is specifically formulated to provide sparkling clean and spotless glasses, plasticware, dishes and silverware. Effective at high and low temperatures.



## **VENTURE**

Venture detergent is a blended liquid specifically formulated for use in commercial dishwashing machines, operating with medium hard to soft water quality.



## **VISION**

Vision rinse aid is formulated with superior wetting agents designed to provide surface tension reduction then by accelerating drying and anti spotting.



## **SUPRA**

Supra is a strong chlorinated dishwashing detergent. It is designed to remove stubborn stains from all types of china and glassware. Supra ensures stain free results. **NOT RECOMMENDED FOR USE ON SILVERWARE.**



## **T.D.S.**

T.D.S. is a specially designed rinse additive, highly effective in extreme cases of very hard water conditions and where the water T.D.S. level is above normal.



## **BOOSTER**

Booster is a one step sanitizer, destainer and germicidal cleaner. Maintains its potency in a wide range of temperatures. Improves any detergent action.



**ASSURED PERFORMANCE** policy guarantees total satisfaction to our customers, keeping the purpose of serving the public health foremost in our mind. Our Engineering Support team revolves around high quality products and services that are offered on the basis of Total Value and Merits.





## 8 Steps to maintain your Dishwasher

---

- 1 Clean the dishwasher filter to remove debris and stuck food pieces. Solid wastes can damage the dishwasher pump. ( follow the instructions manual )
- 2 Remove any debris from the small holes in the dishwasher's spray arm using a toothpick or other small blunt object that will not damage the spray arm. If these holes become clogged, it can adversely affect the dishwasher's performance.
- 3 Consider fitting your dishwasher with a water softener if you have hard water.
- 4 Use a cleaning product formulated to clean a dishwasher on a regular basis ( DSCALE ).
- 5 Examine the wash arms and the bearings they spin on for wear. Replace the bearings as needed to prevent a decline in your dishwasher's performance.
- 6 Check to make sure the flow pressure is at the optimum setting for your machine.
- 7 Double-check your hot water heater setting. It should be set to 140° F ( 60° C ).
- 8 Inspect your dishes after the wash cycle is complete.